

4. Operating instructions

4.4 Tracking the belt

The belt tracking is set prior to the unit leaving our factory. Should the tracking of the belt need to be set or adjusted, please proceed as follows:

- Loosen the side plate screws (2.1).
- Bring up the tension of the belt with the adjusting screw (2.2).
- Tighten the side plate screws (2.1).

